

## ENGLISH

<b>Introduction</b> .....	4
<b>Care and maintenance</b> .....	4
<b>Warning</b> .....	4
Hearing protection .....	4
Safety .....	4
<b>Features</b> .....	5
General features .....	5
Technical specifications .....	5
Audio .....	5
Connectivity .....	5
Microphone .....	5
Battery .....	5
Compatibility .....	5
<b>Product content</b> .....	6
<b>General overview</b> .....	6
<b>Main Functions</b> .....	7
<b>Switching on and off the device</b> .....	7
<b>Bluetooth® pairing</b> .....	7
<b>Playback control</b> .....	7
<b>Call control</b> .....	7
<b>Using the Voice Assistant feature</b> .....	7
Charging the battery .....	7
<b>Restoring default settings</b> .....	8
Using silicone ear tips .....	8
<b>Warranty</b> .....	8
Declaration of conformity .....	9



ENERGY♥SYSTEM



# earphones style pocket

Manual de usuario / User manual  
Manual de l'utilisateur / Manual do usuário

## Introduction

---

Thank you for trusting our company and buying the new *Earphones Style Pocket*. We hope you enjoy the product.

## Care and maintenance

---

- Do not expose your *Earphones Style Pocket* to impacts, dust, humidity or high temperatures.
- Do not use neither corrosive nor abrasive cleaning products.
- Do not disassemble the device. All repair works should be carried out exclusively by qualified staff of Energy Sistem Technology, S.A.
- Please make sure your *Earphones Style Pocket* are off when you are not using them. Do not let them completely discharged for a long time.
- You can clean the earbuds' external surface and charging connectors with a clean cloth and hand sanitiser. Do not use these products to clean the ear tips or the internal mesh of the earphones. Avoid getting the charging ports and connectors wet.

**Note:** After every workout session, we recommend thoroughly drying the earphones before putting them back in the case.

## Warning

---

### Hearing protection

Listening to loud music can cause irreversible hearing loss. To avoid hearing damage, we recommend the following guidelines:

- Do not listen to loud music for long periods of time.
- Turn the volume down on the source device before using the earphones, then gradually increase the volume to a safe volume level.

### Safety

For safety reasons and to avoid possible accidents, we recommend the following safety measures:

- Do not use the earphones while driving or carrying out any other activity that requires special attention.
- Keep the product, packaging and accessories out of the reach of children and pets to avoid accidents and choking hazard.

## Features

---

### General features

- True Wireless pocket earphones to listen to all your music wirelessly. Answer your calls clearly and in stereo thanks to Bluetooth 5.1 and built-in microphones. Use the charging case to enjoy 12 hours of battery life.

### Technical specifications

#### Audio

- Frequency response: 20 Hz ~ 20 kHz
- Driver diameter: 6 mm
- Earbud design
- Type: dynamic

#### Connectivity

- Bluetooth® 5.1 (class 2) wireless technology.
- Frequency band: 2.4 GHz
- Maximum output power: < 20.00 dBm
- Compatible Bluetooth profiles: HSP / HFP / A2DP / AVRCP
- Compatible with SBC codecs
- Up to 20 m distance range
- True Wireless function with auto-pairing
- Hands-free function
- Voice assistant compatible with Google/Siri

#### Microphone

- Type: built-in microphone
- Sensitivity: -42 dB ± 3 dB (@1 kHz)
- Frequency response: 100 Hz ~ 10 kHz

#### Battery

##### Earbuds:

- Capacity: 25 mAh (each earbud) / 3.7 V
  - Type: lithium-polymer battery
  - Battery life at medium volume: 4 hours\*
  - Charging time: 1.5 hours
  - Charging method: charging case
- This value is approximate. The battery life depends on the selected volume and the type of music.

##### Charging case:

- Capacity: 150 mAh / 3.7 V
- Type: lithium-polymer battery
- Extra battery life: 8 hours\*
- Charging time: 1.5 hours
- Charging port: microUSB

#### Compatibility

- Smartphone
- Tablet
- Windows PC


## Product content

---

- Earphones Style Pocket
- Charging case
- 3 interchangeable earbud sets
- MicroUSB cable
- Quick guide

## General overview

---

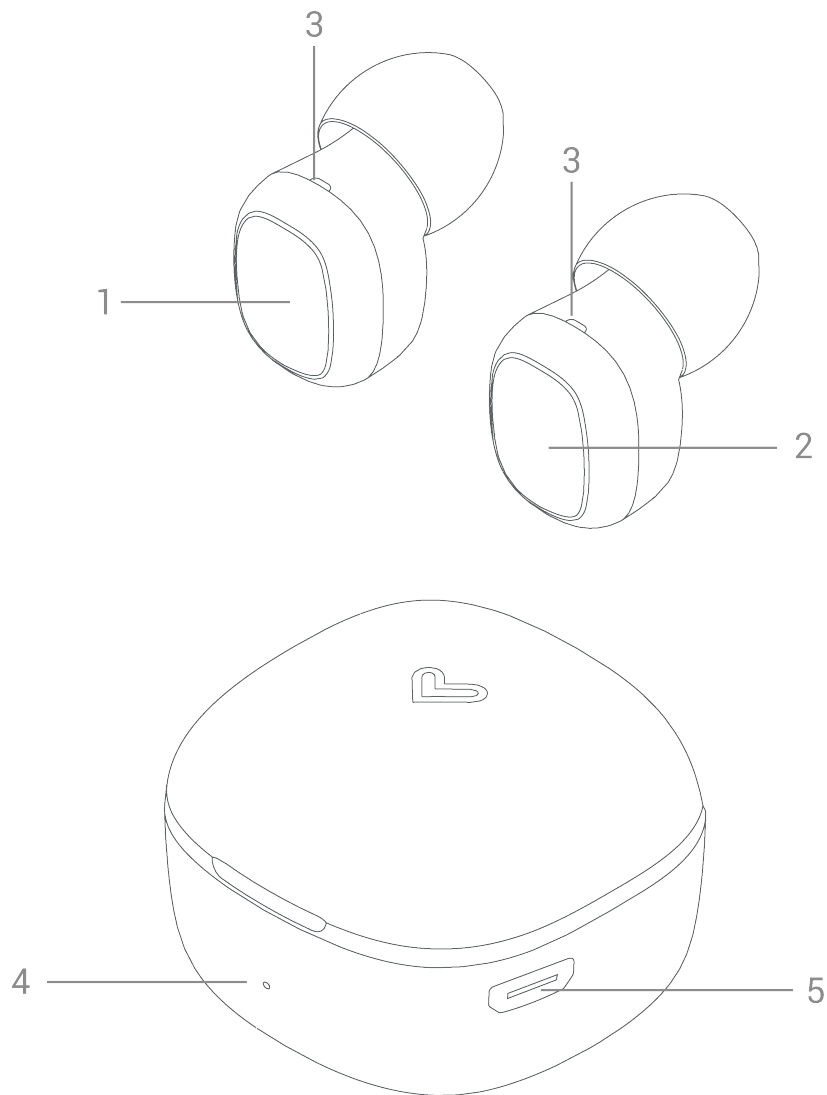

1. Left multifunction button
2. Right multifunction button
3. Microphone
4. Charging indicator (charging case)
5. MicroUSB charging port

## Main Functions

---

### Switching on and off the device

---

To switch on your *Earphones Style Pocket*, simply take them out of the charging case or press and hold the *Left and Right multifunction buttons (1 and 2)* for 2 seconds. You will hear a confirmation sound. Both earbuds sync automatically.

To switch off your *Earphones Style Pocket*, put them back in the charging case or press and hold the *Left and Right multifunction buttons (1 and 2)* for 5 seconds.

### Bluetooth® pairing

---

Switch on your *Earphones Style Pocket*. Both earbuds sync automatically. Select *Earphones Style Pocket* from the list of Bluetooth devices on your smartphone or Bluetooth music player and press ?connect?. Both earbuds will be connected immediately and without codes. You will hear a confirmation sound when both units are paired.

If you previously paired the earbuds with a device, there is no need to repeat the pairing process. Just enable Bluetooth mode on your music player and switch on your *Earphones Style Pocket*. They will sync with it automatically.

### Playback control

---

Play / Pause

Press the *Left or Right multifunction button (1 or 2)* twice in a row to resume playback or pause the music.

Volume + / Volume -

Press the *Left or Right multifunction button (1 or 2)* to turn the volume up or down.

Skipping to the next/previous track

Press and hold the *Left or Right multifunction button (1 or 2)* for 2 seconds to skip to the next or previous track during music playback.

### Call control

---

Once the *Earphones Style Pocket* and your smartphone are paired, you can control calls from the earphones.

Answering / Ending a call

To answer an incoming call, press the *Left or Right multifunction button (1 and 2)* once. Press the same button twice to hang up.

### Using the Voice Assistant feature

---

You can interact with your smartphone voice assistant using your *Earphones Style Pocket*. To do so, press the *Left multifunction button (1)* three times in a row. You can give the voice command after hearing the confirmation sound.

#### Charging the battery

Earphones

When the battery level of your *Earphones Style Pocket* is below 2%, you will hear a low battery warning sound. To charge the earphones' battery, put the earbuds back in the charging case. The *Charging indicator (charging case) (4)* flashes in white and switches off once the charging process is complete.

Charging case

When the battery level of the charging case is below 10%, the *Charging indicator (charging case) (4)* starts flashing. Plug the microUSB end of the provided cable into the *MicroUSB charging port (5)*, and the other end into a 5 V USB

charging device. The *Charging indicator (charging case) (4)* lights up red. Once the charging process is complete, it will turn white.

**Important:** We recommend not leaving neither your *Earphones Style Pocket* nor your charging case unused for long periods of time with an empty battery. We advise charging the battery at least once a month.

## Restoring default settings

---

To restore the device to its default settings, follow the steps below:

- 1- Switch on the earbuds and tap either earbud six times in a row.
- 2- At this point they will switch off. Repeat the steps in the *Bluetooth® pairing* section.
- 3- Before repeating the *Bluetooth pairing* process, remove the previously paired device from the Bluetooth list on your smartphone.

### Using silicone ear tips

The advantage of silicone ear tips is that they are washable and durable. Watch the video below to see how you can easily change them. [Video - How do I change the ear tips for my earphones?](#)

## Warranty

---

Find the full warranty terms and conditions at:

<https://www.energysystem.com/terms-warranty>



Declaration of conformity

Issuer's name: Energy Sistem Technology, S.A. - CIF: A53107488

Address: C/ Calpe, 1 - 03509 Finestrat, Alicante (Spain)

Tel: +34 966 830 324

We declare under our sole and exclusive responsibility that the product:

Description: earphones

Brand: Energy Sistem

Model: Earphones Style Pocket

Manufacturer: Energy Sistem Technology, S.A.

Manufacturing country: China

referred to in this declaration complies with the essential norms and standards

- EN 55032:2015+A11:2020+A1:2020
- EN 55035:2017+A11:2020
- EN IEC 61000-3-2:2019
- EN 61000-3-3:2013+A1:2019
- EN 60663:2017
- EN IEC 62368-1:2020+A11:2020
- ETSI EN 301 489-1 v2.2.3 (2019-11)
- ETSI EN 301 489-17 v3.2.4 (2020-09)
- ETSI EN 300 328 v2.2.2 (2019-07)

in conformity with the provisions of the Directive 2014/53/EU of the European Parliament and of the Council of 16th April 2014.

Finestrat, 1st October 2022



Miguel Ángel Aragüez García

Innovation and Technology Director

